


 

 

 



 

 

 

 

 







 










Originale	Sostituto
 Power	 Power
 HDD	 Shift + Media
 DVD	 Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide
 Cancel	 Exit
 AV	 AV
 Input Select	 Eject

Originale	Sostituto
 Direct Tv Rec	 TV/R
 ShowView	 3D
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 I<< Skip	 I<<
 Skip >>I	 >>I
 << Slow/Search	 <<
 Slow/Search >>	 >>
 Pause	 Pause
 Stop	 Stop
 Play	 Play
 Menu / Play List	 Menu
 Top Menu / Direct Navigator	 D. Menu
 Functions	 Options
 Return	 Back




















 



 

 





 



 




Originale	Sostituto
	Up
	Down
	Right
	Left
	Ok
	Rec
	Shift + Right
	Shift + Left
	Format
	Text
	Smart
	Sleep
	Shift + AV
	Pre Ch
	Subt
	List
	Shift + Rec

Originale	Sostituto
A/Display	Red
A/Display	Info
B/Position	Green
C/Audio	Yellow
C/Audio	Dual
D/AV Link	Blue





Originale		Sostituto	
	Power		Power
	CH+		Ch +
	CH-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	A		Red
	B		Green
	C		Yellow

Originale		Sostituto	
	D		Blue

