
 





 

 



 

 

 




 








 






Originale	Sostituto
 Power	 Power
 Mute	 Mute
 TV	 Shift + 1
 Rec	 Shift + 2
 DVD	 Shift + 3
 Radio	 TV/R
 Rec Menu	 D. Menu
 [-]/Timeshift	 Format
 Audio	 Dual
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Originale	Sostituto
 9	 9
 0/AV	 0
 EPG/I.Skip	 Guide
 Assist	 Media
 PIP	 3D
 Text/Disc-M	 Text
 Menu	 Menu
 End	 Exit
 Info	 Info
 Vol+	 Vol +
 Vol-	 Vol -
 P+	 Ch +
 P-	 Ch -
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left





 

 



 





 

 

 




 













Originale		Sostituto		Originale	Sostituto
	OK		Ok		
	Red/C-Set		Red		
	Green/SV		Green		
	Yellow/Zoom		Yellow		
	Blue/Marker		Blue		
	<<		<<		
	Play		Play		
	>>		>>		
	Rec		Rec		
	Pause		Pause		
	Stop		Stop		













 






Originale	Sostituto
 Power	 Power
 Mute	 Mute
 TV	 Shift + 1
 Rec	 Shift + 2
 DVD	 Shift + 3
 Radio	 TV/R
 Rec Menu	 D. Menu
 [-]/Timeshift	 Format
 Audio	 Dual
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Originale	Sostituto
 9	 9
 0/AV	 0
 EPG/I.Skip	 Guide
 Assist	 Media
 PIP	 3D
 Text/Disc-M	 Text
 Menu	 Menu
 End	 Exit
 Info	 Info
 Vol+	 Vol +
 Vol-	 Vol -
 P+	 Ch +
 P-	 Ch -
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left






 




 
 



 













 










Originale		Sostituto		Originale		Sostituto	
	OK		Ok				
	Red/C-Set		Red				
	Green/SV		Green				
	Yellow/Zoom		Yellow				
	Blue/Marker		Blue				
	<<		<<				
	Play		Play				
	>>		>>				
	Rec		Rec				
	Pause		Pause				
	Stop		Stop				





Originale	Sostituto
 Power	 Power
 Mute	 Mute
 Tv	 Shift + 1
 Rec	 Shift + 2
 DVD	 Shift + 3
 Radio	 TV/R
 Rec Menu	 D. Menu
 [-]/Timeshift	 Format
 Audio	 Dual
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Originale	Sostituto
 9	 9
 0/AV	 0
 EPG/I.Skip	 Guide
 Assist	 Media
 PIP	 3D
 Text/Disc-M	 Text
 Menu	 Menu
 End	 Exit
 Info	 Info
 Vol+	 Vol +
 Vol-	 Vol -
 P+	 Ch +
 P-	 Ch -
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left


 
 
 
 
 




 




 
 



 

















 






Originale		Sostituto		Originale	Sostituto
	OK		Ok		
	Red/C-Set		Red		
	Green/SV		Green		
	Yellow/Zoom		Yellow		
	Blue/Marker		Blue		
	<<		<<		
	Play		Play		
	>>		>>		
	Rec		Rec		
	Pause		Pause		
	Stop		Stop		





Originale	Sostituto
 TV	 Shift + 1
 Rec	 Shift + 2
 DVD	 Shift + 3
 Radio	 TV/R
 Power	 Power
 Mute	 Mute
 Rec Menu	 D. Menu
 [-]/Timeshift	 Format
 Audio	 Dual
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Originale	Sostituto
 9	 9
 0/AV	 0
 EPG/I.Skip	 Guide
 Assist	 Media
 PIP	 3D
 Text/Disc-M	 Text
 Menu	 Menu
 End	 Exit
 Info	 Info
 Vol+	 Vol +
 Vol-	 Vol -
 P+	 Ch +
 P-	 Ch -
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left





Originale	Sostituto	Originale	Sostituto
 OK	 Ok		
 Red/C-Set	 Red		
 Green/SV	 Green		
 Yellow/Zoom	 Yellow		
 Blue/Marker	 Blue		
 <<<	 <<<		
 Play	 Play		
 >>>	 >>>		
 Rec	 Rec		
 Pause	 Pause		
 Stop	 Stop		

