











Originale	Sostituto
 Eject	 Eject / Surround
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 A.Sel	 D.Menu / Top
 0	 0
 AV	 AV / Input / RDS
 >> 30	 >>I / Preset+
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze

Originale	Sostituto
 <<	 << / Tune-
 >>	 >> / Tune+
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold
 I>	 I<< / Preset-
 Prog	 TV/Radio /
 SP/LP	 Setup / OPT /
 PR+	 CH+ / Page+
 PR+	 Up
 Menu	 Menu / Home
 [A]	 Text / Goto
 ←	 Left
 OK	 OK
 →	 Right
 Index-	 Vol-
 Index+	 Vol+
 PR-	 CH- / Page-








Originale		Sostituto		Originale		Sostituto	
	PR-		Down				
	TV/VCR		Display / Media				
	PAL/SEC		Picture / Format				





Originale	Sostituto
 Eject	 Eject / Surround
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 A.Sel	 D.Menu / Top
 0	 0
 AV	 AV / Input / RDS
 >>30	 >>I / Preset+
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze

Originale	Sostituto
 <<	 << / Tune-
 >>	 >> / Tune+
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold
 I>	 I<< / Preset-
 SV/V+	 TV/Radio /
 SP/LP	 Setup / OPT /
 Up/PR+	 CH+ / Page+
 Up/PR+	 Up
 Menu	 Menu / Home
 [A]	 Text / Goto
 Left	 Left
 OK	 OK
 Right	 Right
 Index-	 Vol-
 Index+	 Vol+
 Down/PR-	 CH- / Page-






















Originale		Sostituto		Originale		Sostituto	
	Down/PR-		Down				
	Tv/VCR		Display / Media				
	PAL/SEC		Picture / Format				





Originale	Sostituto
 Eject	 Eject / Surround
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 A.Sel	 D.Menu / Top
 0	 0
 AV	 AV / Input / RDS
 >>30	 >>I / Preset+
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze

Originale	Sostituto
 <<	 << / Tune-
 >>	 >> / Tune+
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold
 I>	 I<< / Preset-
 SV/V+	 TV/Radio /
 SP/LP	 Setup / OPT /
 Down/PR-	 CH- / Page-
 Up/PR+	 Up
 Menu	 Menu / Home
 [A]	 Text / Goto
 Left	 Left
 OK	 OK
 Right	 Right
 Index-	 Vol-
 Index+	 Vol+
 Up/PR+	 CH+ / Page+





Originale	Sostituto	Originale	Sostituto
 Down/PR-	 Down		
 Tv/VCR	 Display / Media		
 PAL/SEC	 Picture / Format		

