
 
 




 

 
 





 



 
 


 

 


 
 






 
 






 

 



 

 







 





 


 




 

Originale	Sostituto	Originale	Sostituto
On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Update	 Media	Menu Off	 Exit
Reveal	 Smart	Menu Down	 Down
Txt Stop	 Stop	Back	 Back
Subt.List	 Subt	Volume+	 Vol +
Info	 Info	Chan.Up	 Ch +
Sleep Timer	 Sleep	Volume-	 Vol -
Return TV	 TV/R	Menu audio	 Dual
Menu video	 D. Menu	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Expand	 Eject	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Shift + Info	6	 6
Menu Left	 Left	7	 7








 



 


 




Originale	Sostituto	
8		8
9		9
Guide -/-- 1.		Guide
0/10		0
2.Fav P/C 2.		Pre Ch
Red		Red
Green		Green
Yellow		Yellow
Bright+ Mode		Options
Mix Scan	 + 	Shift + Smart
Game Coo	 + 	Shift + Options
Aft/Caf	 + 	Shift + Menu
Blue		Blue
On/Tim		List
Off/Tim	 + 	Shift + List
Store	 + 	Shift + Media
AV 2	 + 	Shift + AV


 
 
 
 
 

 

 
 

 









 
Originale	Sostituto	
Search	 + 	Shift + TV/R
Rotate Text	 + 	Shift + 3D
Disp		3D
Color+ P.Std	 + 	Shift + Format
Store Text	 + 	Shift + Text
Tune-	 + 	Shift + Left
Tune+	 + 	Shift + Right
Contrast+	 + 	Shift + Ch +
Color- S.Std	 + 	Shift + Dual
Contrast-	 + 	Shift + Ch -
3.*	 + 	Shift + Guide
4.# 16:9		Format
Surround	 + 	Shift + Red
Nicam/Mono	 + 	Shift + Green
Level L	 + 	Shift + Yellow
Level R/Woofers	 + 	Shift + Blue


 
 

 
 
 

 

 

 






 



 








Originale	Sostituto
On/Off	 Power
Mute	 Mute
Update	 Shift + Smart
Txt Stop	 Stop
Reveal	 Smart
Info	 Info
Subt.List	 Subt
Sleep Timer	 Sleep
Return TV	 TV/R
Menu video	 D. Menu
Text	 Text
Txt Expand	 Eject
TV/AV	 AV
Menu	 Menu
Menu Up	 Up
Display	 Shift + Info
Menu Left	 Left



Originale	Sostituto
OK Enter	 Ok
Menu Right	 Right
Menu Off	 Exit
Menu Down	 Down
Back	 Back
Volume+	 Vol +
Chan.Up	 Ch +
Menu audio	 Dual
Volume-	 Vol -
Chan.Down	 Ch -
1	 1
2	 2
3	 3
4	 4
5	 5
6	 6
7	 7



Originale	Sostituto	
8		8
9		9
Guide -/-- 1.		Guide
0/10		0
2.Fav P/C 2.		Pre Ch
Red		Red
Audio+	 + 	Shift + List
Bright+ Mode	 + 	Shift + 3D
Green		Green
Rotate Text		Play
Mix Scan		List
Aft/Caf	 + 	Shift + Ok
Yellow		Yellow
Blue		Blue
Color+ P.Std	 + 	Shift + Format
Tone-	 + 	Shift + Down
Search	 + 	Shift + TV/R

Originale	Sostituto	
Tone+	 + 	Shift + Up
Disp		3D
Store Text	 + 	Shift + Text
Store		Media
On/Tim		Options
Off/Tim	 + 	Shift + Options
AV 2	 + 	Shift + AV
Color- S.Std	 + 	Shift + Dual
4.# 16:9		Format
Tune-	 + 	Shift + Left
Tune+	 + 	Shift + Right
Browse	 + 	Shift + Back
Contrast+	 + 	Shift + Ch +
Contrast-	 + 	Shift + Ch -
Surround	 + 	Shift + Red
Nicam/Mono	 + 	Shift + Green
Level L	 + 	Shift + Yellow



Originale	Sostituto	Originale	Sostituto
Level R/Woofer	 +  Shift + Blue		

