



Originale	Sostituto
 Power	 Power
 [i+]/Search	 Info
 [i+]/Search	 TV/R
 [X]/Mark	 Pre Ch
 [..≡]/Zoom	 Options
 [..≡]/Zoom	 Shift + Eject
 [≡] / DVD Menu	 D. Menu
 [≡] / DVD Menu	 Text
 [?]/Subtitle	 Exit
 [ ] / A-B	 List
 [ ↓ ] / Repeat	 Shift + Text
 [ ◀▶ ] / Clear	 Format
 <<Fast	 <<
 >>Fast	 >>
 <<Skip	 I<<
 >>Skip	 >>I
 Stop/Eject	 Stop

Originale	Sostituto
 Stop/Eject	 Eject
 Pause/Play	 Play
 Pause/Play	 Pause
 Menu	 Menu
 OK	 Ok
 Up	 Up
 Left	 Left
 Right	 Right
 Down	 Down
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 P+	 Ch +
 P-	 Ch -
 Red/Audio I-II	 Red
 Red/Audio I-II	 Dual
 Green / J	 Green





Originale		Sostituto	
	Green / ♪	+	Shift + Dual
	Yellow / □		Yellow
	Yellow / □	+	Shift + Format
	Blue / TV/DVD		Blue
	Blue / TV/DVD		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	□→		AV
	P<P		Back

Originale	Sostituto

