



 






 
 




 





 






 




 
 
 

 
 
 
 
 
 


 









 



 








Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Contents	 Smart
 Open / Close	 Exit	 Source	 AV
 Display	 Info	 TV / Mode	 TV/R
 Setup	 Options	 Up	 Up
 1	 1	 Left	 Left
 2	 2	 Enter	 Ok
 3	 3	 Right	 Right
 4	 4	 Down	 Down
 5	 5	 Top Menu	 D. Menu
 6	 6	 Menu	 Menu
 7	 7	 Stop	 Stop
 8	 8	 Play	 Play
 9	 9	 II>	 Pause
 0	 0	 I<<	 I<<
 CH+	 Ch +	 >>I	 >>I
 CH-	 Ch -	 <<	 <<
 Guider	 Guide	 >>	 >>

Originale	Sostituto	Originale	Sostituto
 Power	 MUTE	 SHIFT	
 TV	 DVD	 SAT	 AUX
 PLAY MODE	 REC MODE		
 I<<	 I<<	 >>I	 >>I
 LIST	 DUAL	 SUBT	 OPT
 SLEEP	 TV/R	 FORMAT	 3D
 E-MANUAL	 REPEAT	 ZOOM	 TIMER
 D.MENU	 TEXT		
 TOP MENU	 INFO		
 EXIT	 RETURN	 BACK	
 VOL+	 HOME SMART	 CH+	
 VOL-	 APP MEDIA	 CH-	
 1	 2	 3	
 4	 5	 6	
 7	 8	 9	
 GUIDE	 0	 PRE-CH	
 A	 B	 C	 D
			
www.mandis.tv			





	Originale	Sostituto	Originale	Sostituto
	Navi.	A		Red
	Edit	B		Green
	Copy	C		Yellow
	Time Shift	D		Blue
	Record			Rec
	HDD/DVD			Media
	ShowView			3D
	Timer	SHIFT + AV		Shift + AV
	Timer			Sleep

