


 

 





 

 

 





 

 
 


 



 










 




 

 







 

 

 
 
 

 
 








 



 

 

 






 

 




Originale		Sostituto		Originale		Sostituto	
	Power		Power		7		7
	[ + ]		Info		8		8
	Tv/AV		AV		9		9
	Mute		Mute		0		0
	^		Ch +		-/--		Guide
	v		Ch -		Timer		Shift + AV
	Vol+		Vol +		N		Media
	Vol-		Vol -		Menu		Menu
	V		Ok		Mood Light		Format
	V+		Right		Red		Red
	V-		Left		Green		Green
	1		1		Yellow		Yellow
	2		2		Blue		Blue
	3		3		Power VCR		Shift + Power
	4		4		Audio Out VCR		Dual
	5		5		^ VCR		Up
	6		6		v VCR		Down





Originale	Sostituto	Originale	Sostituto
	Stop		[≡⇅]
	Pause		[⋮]
	II>		Back
	<<		<<
	Play		Play
	>>		>>
	Rec		Rec
	Tv/TXT		Text
	F.P.		Pre Ch
	[ /≡]		Options
	[≡⇐ ⇨]		Eject
	[≡?]		TV/R
	[≡◇]		3D
	[≡i]		List
	[≡+]		D. Menu
	[≡o]		Smart
	[≡x]		Sleep

