





 
 
 
 

 
 



 


 


 
 
 






 





 

 
 
 

 
 
 


 




 

 

 
 





 
 


Originale	Sostituto
 Power	 Power
 Open / Close	 Eject
 DVD	 Smart
 VCR	 Media
 Display	 Info
 Disc Menu	 D. Menu
 Up / PR/TRK+	 Up
 Up / PR/TRK+	 Ch +
 Left	 Left
 OK / Enter	 Ok
 Right	 Right
 Down / PR/TRK-	 Down
 Down / PR/TRK-	 Ch -
 Setup	 Menu
 Return	 Back
 Pause / Step	 Pause
 I<< Skip	 I<<




 


Originale	Sostituto
 >>I Skip	 >>I
 Stop	 Stop
 << Backward	 <<
 Play	 Play
 >> Forward	 >>
 Program	 Sleep
 Clear	 Exit
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0







Originale	Sostituto	Originale	Sostituto
 Power	 Power	 << Backward	 <<
 Eject	 Eject	 Play	 Play
 TV / VCR	 Menu	 >> Forward	 >>
 DVD	 Smart	 Clear	 Exit
 VCR	 Media	 1	 1
 AV	 AV	 2	 2
 CLK / CNT	 3D	 3	 3
 Up / PR/TRK+	 Up	 4	 4
 Up / PR/TRK+	 Ch +	 5	 5
 Down / PR/TRK-	 Down	 6	 6
 Down / PR/TRK-	 Ch -	 7	 7
 Right	 Right	 8	 8
 Left	 Left	 9	 9
 OK	 Ok	 0	 0
 i	 Info	 Audio	 Dual
 Pause / Step	 Pause	 Search	 TV/R
 Stop	 Stop	 CM Skip	 Yellow

Originale	Sostituto	Originale	Sostituto
 MUTE	 MUTE	 SHIFT	 SHIFT
 TV	 TV	 DVD	 DVD
 SAT	 SAT	 AUX	 AUX
 PLAY MODE	 PLAY MODE	 REC MODE	 REC MODE
 PLAY	 PLAY	 PAUSE	 PAUSE
 STOP	 STOP	 REPEAT	 REPEAT
 <<	 <<	 >>	 >>
 >>	 >>	 DISC NAV LIST	 DISC NAV LIST
 CLEAR	 CLEAR	 SOUND DUAL	 SOUND DUAL
 1	 1	 SUBT	 SUBT
 2	 2	 AD	 AD
 3	 3	 SETTINGS	 SETTINGS
 4	 4	 OPT	 OPT
 5	 5	 ECO	 ECO
 6	 6	 PICTURE	 PICTURE
 7	 7	 3D	 3D
 8	 8	 TIMER	 TIMER
 9	 9	 AV	 AV
 0	 0	 TOP MENU MENU	 TOP MENU MENU
 10	 10	 DISPLAY INFO	 DISPLAY INFO
 OK	 OK	 CLEAR	 CLEAR
 EXIT	 EXIT	 RETURN BACK	 RETURN BACK
 VOL +	 VOL +	 HOME SMART	 HOME SMART
 VOL -	 VOL -	 APP MEDIA	 APP MEDIA
 CH +	 CH +	 1	 1
 CH -	 CH -	 2	 2
 1	 1	 3	 3
 2	 2	 4	 4
 3	 3	 5	 5
 4	 4	 6	 6
 5	 5	 7	 7
 6	 6	 8	 8
 7	 7	 9	 9
 8	 8	 0	 0
 9	 9	 GUIDE	 GUIDE
 0	 0	 0	 0
 AUDIO	 AUDIO	 FAV	 FAV
 SEARCH TV/R	 SEARCH TV/R	 PRE-CH	 PRE-CH
 RANDOM CM SKIP	 RANDOM CM SKIP	 A	 A
 YELLOW	 YELLOW	 B	 B
 A	 A	 C	 C
 B	 B	 D	 D
 C	 C	 Mandis SHOP	 Mandis SHOP
 D	 D	 www.mandis.tv	 www.mandis.tv



