



Originale	Sostituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 SUBTIL	 Subt
 TV / SAT	 Smart
 FAV	 Pre Ch
 RCL	 Back
 Up / CH+	 Up

Originale	Sostituto
 Down / CH-	 Down
 Down / CH-	 Ch -
 Right / Vol+	 Right
 Right / Vol+	 Vol +
 Left / Vol-	 Left
 Left / Vol-	 Vol -
 OK	 Ok
 Menu	 Menu
 Exit	 Exit
 TXT	 Text
 USB	 Media
 Info	 Info
 Audio	 Dual
 M / P	 Options
 Up / CH+	 Ch +
 Page+	 Shift + Ch +
 Page-	 Shift + Ch -





Originale	Sostituto
Red / SAT	AV
Red / SAT	Red
Green / Zoom	Green
Green / Zoom	Eject
Yellow / Pause	Yellow
Yellow / Pause	+  Shift + Pause
Blue / TV/Radio	Blue
Blue / TV/Radio	TV/R
<<	<<
>>	>>
Play	Play
Stop	Stop
<<	<<
>>	>>
Pause	Pause
Slow	+  Shift + Play

Originale	Sostituto

