


 

 


 
 

 










Originale		Sostituto		Originale		Sostituto	
	Power		Power		Right / V+		Vol+
	Mute		Mute / Dimmer		Right / V+		Right
	TV → HDD		TV/Radio /		I<		I<< / Preset-
	Doc		Picture / Format		>I		>>I / Preset+
	Disc		D.Menu / Top		Down / CH-		Down
	Input		AV / Input / RDS		Down / CH-		CH- / Page-
	Input		Smart / List		Rec		Rec / Rec Mode
	<<		<< / Tune-		[i]		Info / Angle
	>>		>> / Tune+		P / 1		Display / Media
	Stop		Stop / Hold		Menu		Menu / Home
	Up / CH+		CH+ / Page+		⊖		Sleep / Timer
	Up / CH+		Up		1		1
	Pause		Pause / Step / Freeze		2		2
	Left / V-		Left		3		3
	Left / V-		Vol-		4		4
	OK / Play		Play / Slow		5		5
	OK / Play		OK		6		6



