
 



 
 
 
 
 
 
 
 
 
 
 

 


 


 
 







 
 


 

 









 







Originale		Sostituto		Originale		Sostituto	
	Power		Power		Menu		Menu
	Source		AV		Vol+		Vol +
	[<>]/[+]		Format		Vol-		Vol -
	I-II/[≡≡]		Dual		Mute		Mute
	[*]		Subt		Smart		Smart
	0		TV/R		[] Smart		Media
	Red/TV		Red		P+		Ch +
	Green/PC		Green		P-		Ch -
	Yellow/Radio		Yellow		1		1
	Blue/[]		Blue		2		2
	Active Control		Options		3		3
	[≡]		Text		4		4
	Up		Up		5		5
	Down		Down		6		6
	Right		Right		7		7
	Left		Left		8		8
	OK		Ok		9		9














 


 

 








 





 



 

 



 

 


 
 


Originale		Sostituto	
	0		0
	[i+]		Info
	P<P		Pre Ch

Originale		Sostituto	







 

 

 







 


 
 


Originale	Sostituto
 Power	 Power
 >>I	 >>I
 Rec	 Rec
 I<<	 I<<
 Stop	 Stop
 Play	 Play
 Pause	 Pause
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 OK
 Menu	 Menu
 P+	 Ch +
 P-	 Ch -
 1	 1
 2	 2

Originale	Sostituto
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 P<P	 Pre Ch
 [i+]	 Info





Originale	Sostituto
 Power	 Power
 >>I	 >>I
 I<<	 I<<
 Pause	 Pause
 Active Control	 Options
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Menu	 Menu
 Mute	 Mute
 P+	 Ch +
 P-	 Ch -
 Vol-	 Vol -
 Vol+	 Vol +
 1	 1

Originale	Sostituto
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 P<P	 Pre Ch

