




 
 


 


 

 









 




 
 

 
 

 




 
 




Originale	Sostituto
 Power	 Power
 USB	 Media
 Power Tv	 Shift + Power
 Video Sel	 Smart
 HDMI Sel	 AV
 Repeat	 Text
 A-B Repeat	 Shift + Text
 Open/Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Originale	Sostituto
 0/I.Skip	 0
 Bookmark	 Guide
 Step	 Options
 <<	 <<
 I.Replay	 3D
 Pause	 Pause
 >>	 >>
 I<<	 I<<
 Stop	 Stop
 Play	 Play
 >>I	 >>I
 Tv Vol+	 Vol +
 Tv Vol-	 Vol -
 Tv/Video	 TV/R
 Tv CH+	 Ch +
 Tv CH-	 Ch -
 Menu	 Menu





Originale	Sostituto
 Return	 Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Disc Menu	 D. Menu
 EZ View	 Format
 Exit	 Exit
 Cancel	 Pre Ch
 Subtitle	 Subt
 Audio	 Dual
 Info	 Info
 Zoom	 Shift + Eject

Originale	Sostituto

