 

 


 

 

 






Originale	Sostituto
 Power	 Power
 Eco/Energy	 3D
 AV Mode	 Shift + AV
 Input	 AV
 Tv/Rad	 TV/R
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 List	 List
 Q.View	 Eject

Originale	Sostituto
 FAV/Mark/Char/Num	 Pre Ch
 Ratio	 Format
 Mute/Delete	 Mute
 P+	 Ch +
 P-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Premium	 Smart
 Q.Menu	 D. Menu
 Home	 Menu
 Back	 Back
 Guide	 Guide
 Exit	 Exit
 OK	 Ok
 Up	 Up
 Down	 Down
 Right	 Right





Originale	Sostituto
 Left	 Left
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Text	 Text
 Subtitle	 Subt
 T.Opt	 Options
 Info	 Info
 APP/*	 Media
 AD	 Shift + Subt
 Simplink	 Sleep
 Stop	 Stop
 Play	 Play
 Pause	 Pause
 <<	 <<
 >>	 >>

Originale	Sostituto

