 

 






 

 

 

 





 

 
 









 
 


 
 
 





 
 
 
 
 
 
 

 
 

 




 

 







Originale	Sostituto
 Power	 Power
 Mute	 Mute
 Function	 Smart
 Input	 AV
 Sleep	 Sleep
 Return	 Back
 EQ	 Red
 VSM	 Green
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Originale	Sostituto
 0	 0
 Setup	 Options
 Display	 Info
 Up / Preset+	 Up
 Down / Preset-	 Down
 Right / Tun+	 Right
 Left / Tun-	 Left
 Enter	 Ok
 Menu	 Menu
 Title	 3D
 << / Scan-	 <<
 >> / Scan+	 >>
 Play	 Play
 I<< / Skip-	 I<<
 >>I / Skip+	 >>I
 Pause / Step	 Pause
 Prog. Memo.	 TV/R





Originale		Sostituto		Originale	Sostituto
	Rec		Rec		
	Stop		Stop		
	Volume+		Vol +		
	Volume-		Vol -		
	Repeat		Text		
	S-Title		Subt		
	RDS		Yellow		
	PTY		Blue		
	HT SPK		Dual		
	Clear		Exit		
	TV Power		Shift + Power		
	TV Input		Shift + AV		
	TV Prog+		Shift + Ch +		
	TV Prog-		Shift + Ch -		
	TV Vol+		Shift + Vol +		
	TV Vol-		Shift + Vol -		

