









 

 


 



 

 

 











Originale	Sostituto
 Power	 Power
 Mute	 Mute
 TV / Video	 TV/R
 V.Size	 Eject
 PIP	 Smart
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Text	 Text
 Pre Pg	 Pre Ch

Originale	Sostituto
 Menu / Sel	 Menu
 Menu / Sel	 Ok
 Exit	 Exit
 Up / PG+	 Up
 Up / PG+	 Ch +
 Down / PG-	 Down
 Down / PG-	 Ch -
 Right / Vol+	 Right
 Right / Vol+	 Vol +
 Left / Vol-	 Left
 Left / Vol-	 Vol -
 MTS	 Media
 PG Info	 Info
 Still	 Pause
 Picture	 Format
 Sound	 Dual
 Sleep	 Sleep





Originale	Sostituto	Originale	Sostituto
BRIGHT Bright	SETTINGS OPT Options		
ERASE Red / Erase	A Red		
TIME Time	TIMER AV AV		
SKIP Green / Skip	B Green		
INSERT Yellow / Insert	C Yellow		
REPLACE Blue / Replace	D Blue		

Originale	Sostituto

