



 



 



 









 



 

 

 

 

 

 

 





Originale	Sostituto
	 Power
	 AV / Input / RDS
	 Text / Goto
	 Shift + Exit / Cancel / Clear
	 Shift + Smart / List
	 Setup / OPT /
	 Stop / Hold
	 Zoom / Size
	 Shift + Display / Media
	 Display / Media
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 CH+ / Page+
	 Menu / Home
	 Vol+

Originale	Sostituto
	 CH- / Page-
	 Exit / Cancel / Clear
	 Vol-
	 Smart / List
	 Mute / Dimmer
	 Up
	 Left
	 OK
	 Right
	 Guide / EPG / -/--
	 Down
	 Info / Angle
	 1
	 2
	 3
	 4
	 5





Originale		Sostituto		Originale		Sostituto	
	6		6		>>		>>  / Preset+
	7		7		Play		Play / Slow
	8		8		Pause		Pause / Step / Freeze
	9		9				
	FAV		Fav / Marker / PC				
	0		0				
	Recall		Back / Return				
	Picture		Picture / Format				
	Sound		Sound / Title				
	Nicam/A2		Audio / Lang I/II				
	Sleep		Sleep / Timer				
	Subtitle		Subtitle / EQ				
	Tv/Radio		TV/Radio /				
	<<		<< / Tune-				
	>>		>> / Tune+				
	Repeat		Shift + Green / APP /				
	I<<		I<< / Preset-				

