





Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Info	 Info / Angle
 0	 0
 EPG	 Guide / EPG / -/-
 Settings	 Setup / OPT /
 Input	 AV / Input / RDS
 Up	 Up

Originale	Sostituto
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Back	 Back / Return
 Menu	 Menu / Home
 NETFLIX	 Shift + Netflix /
 YouTube	 Shift + Yellow / YouTube /
 prime video	 Shift + Blue / Prime
 Google Play	 Shift + Green / APP /
 Vol+	 Vol+
 Google Assistant	 Smart / List
 P+	 CH+ / Page+
 Vol-	 Vol-
 Home	 D.Menu / Top
 Home	 Display / Media
 P-	 CH- / Page-





Originale		Sostituto		Originale	Sostituto
	Text		Text / Goto		
	USB		Shift + 8		
	I/II		Audio / Lang I/II		
	Subt		Subtitle / EQ		
	Play / Text Mix		Play / Slow		
	Pause		Pause / Step / Freeze		
	Stop / Text Hold		Stop / Hold		
	Text Size		Zoom / Size		
<< / Text button icon"/>	<< / Text		<< / Tune-		
	I<< / Text Index		I<< / Preset-		
	>>I / Text Reveal		>>I / Preset+		
	>> / Text Cancel		>> / Tune+		
	Red		Red / Netflix / Search		
	Green		Green / APP / Repeat		
	Yellow		Yellow / YouTube / Repeat		
	Blue		Blue / Prime Video / Random		

