



Originale	Sostituto
Power	Power
Mute	Mute
Up / CH+	Up
Up / CH+	Ch +
Left / Vol-	Left
Left / Vol-	Vol -
Right / Vol+	Right
Right / Vol+	Vol +
Down / CH-	Ch -
Down / CH-	Down
Enter	Ok
Menu	Menu
Red / P.M	Red
Red / P.M	Format
Green / S.M	Green
Green / S.M	Shift + Dual
Yellow / FAV	Yellow

Originale	Sostituto
Yellow / FAV	Pre Ch
Blue / SLP	Blue
Zoom	Eject
Freeze	Pause
Blue / SLP	Sleep
DSP / CAPS	Info
Recall	Back
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0



