











































 



























 



 














 


 





Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Left	 Left
 Mute	 Mute / Dimmer	 OK	 OK
 1	 1	 Right	 Right
 2	 2	 List	 Smart / List
 3	 3	 Down	 Down
 4	 4	 Back	 Back / Return
 5	 5	 NETFLIX	 Shift + Red / Netflix /
 6	 6	 YouTube	 Shift + Yellow / YouTube /
 7	 7	 prime video	 Shift + Blue / Prime
 8	 8	 Google Play	 Shift + Green / APP /
 9	 9	 Vol+	 Vol+
 Info	 Info / Angle	 Google Assistant	 Display / Media
 0	 0	 P+	 CH+ / Page+
 EPG	 Guide / EPG / -/--	 Vol-	 Vol-
 Settings	 Setup / OPT /	 Home	 Menu / Home
 Up	 Up	 P-	 CH- / Page-
 Input	 AV / Input / RDS	 Text	 Text / Goto

Originale	Sostituto	Originale	Sostituto
 Power	 DIMMER MUTE	 SHIFT	
 TV	 DVD	 SAT	 AUX
 SLOW	 STEP-FREEZE	 HOLD	 REC MODE
 TUNE-	 TUNE+	 PRESET-	 PRESET+
 TITLE	 LANG UI	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 FORMAT	 SIZE	 TIMER	 TV RADIO
 PICTURE	 ZOOM	 SLEEP	 RDS
 TOP MENU	 OPT-TOOLS	 GOTO	 AV INPUT
 D.MENU	 SETUP	 TEXT	 HOME
 HOME	 ANGLE	 MENU	 INFO
 CLEAR	 EXIT	 CANCEL	 RETURN
 VOL+	 SMART	 CH PAGE	 BACK
 VOL-	 MEDIA	 DISPLAY	 TV
 P+	 CH PAGE	 CH+ / Page+	 DVD
 Vol-	 VOL	 Vol-	 CD-ITB
 Home	 HOME	 Menu / Home	 VIDEO
 P-	 CH PAGE	 CH- / Page-	 TAPE
Text	GOTO	Text / Goto	TUNER





Originale	Sostituto
 USB	 Shift + 8
 I/II	 Audio / Lang I/II
 Subt	 Subtitle / EQ
 Play / Text Mix	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop / Text Hold	 Stop / Hold
 Text Size	 Zoom / Size
 << / Text	 << / Tune-
 I<< / Text Index	 I<< / Preset-
 >>I / Text Reveal	 >>I / Preset+
 >> / Text Cancel	 >> / Tune+
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

Originale	Sostituto

