

















 









 
























 


















Originale		Sostituto		Originale		Sostituto	
	Power		Power		0		0
	i		Info / Angle		Mute		Mute / Dimmer
	Analog Menu		Menu / Home		Exit		Exit / Cancel / Clear
	Digital Menu		D.Menu / Top		Vol+		Vol+
	1		1		Up		Up
	2		2		P+		CH+ / Page+
	3		3		Left		Left
	Input Select		AV / Input / RDS		Enter/CH List		OK
	4		4		Right		Right
	5		5		Vol-		Vol-
	6		6		Down		Down
	ATV/DTV		Smart / List		P-		CH- / Page-
	7		7		TV/Radio		TV/Radio /
	8		8		[=]		Text / Goto
	9		9		[≡o] [≡o]/P<=>P		Fav / Marker / PC
	Guide		Guide / EPG / -/--		Picture Size		Picture / Format
	Timer		Sleep / Timer		[...]		Subtitle / EQ



