



Originale	Sostituto
Standby	Shift + Mute / Dimmer
Mute	Mute / Dimmer
ATV	Shift + AV / Input / RDS
TV / Radio	TV/Radio /
TV Guide	Guide / EPG / -/--
USB	Shift + 8
S.Mode	Sound / Title
USB I<<<	I<<< / Preset-
USB >>>	>>> / Preset+
USB Stop	Stop / Hold
P.Mode	Picture / Format
USB <<<	<<< / Tune-
USB >>>	>>> / Tune+
USB Play/Pause	Shift + Play /
USB Play/Pause	Play / Slow
AV Source	AV / Input / RDS
Up	Up

Originale	Sostituto
Info	Info / Angle
Left	Left
OK	OK
Right	Right
Menu	Menu / Home
Down	Down
Exit	Exit / Cancel / Clear
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0



