
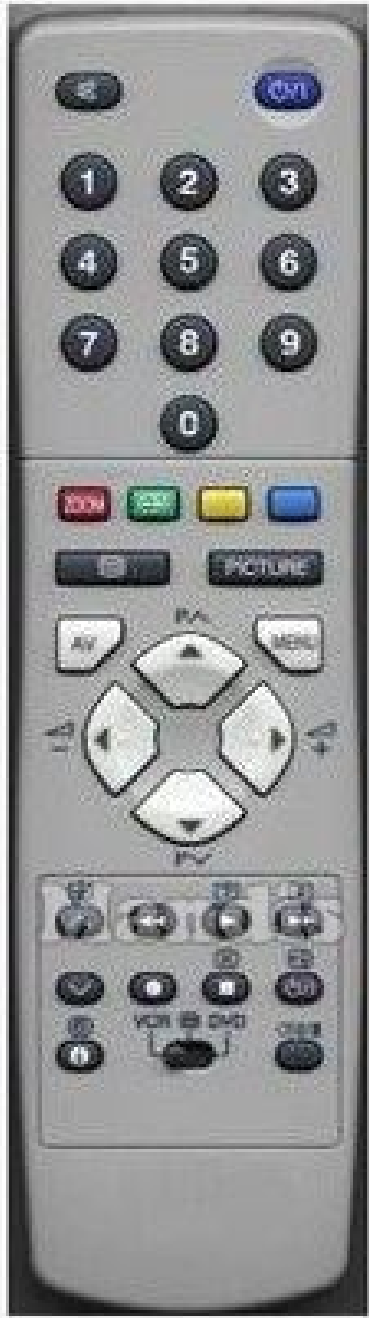


Originale	Sostituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Red/Zoom	 Red
 Green/00	 Green
 Yellow	 Yellow
 Blue	 Blue
 Text	 Text

Originale	Sostituto
 Picture	 Format
 AV	 AV
 Menu	 Menu
 PR+	 Ch +
 Up	 Up
 PR-	 Ch -
 Down	 Down
 Right	 Right
 Vol+	 Vol +
 Vol-	 Vol -
 Left	 Left
 Up VCR	 Shift + Ch -
 UP [≡]	 Shift + Text
 Up DVD	 Shift + Up
 Down VCR	 Shift + Ch +
 Down DVD	 Shift + Down
 << VCR	 Shift + <<





Originale		Sostituto		Originale	Sostituto
	<< DVD		<<		
	Play/[?] VCR	+	Shift + Play		
	Play/[?] [=]		Eject		
	Play/[?] DVD		Play		
	>>/[+] VCR	+	Shift + >>		
	>>/[+] [=]	+	Shift + Right		
	>>/[+] DVD		>>		
	Rec VCR	+	Shift + Rec		
	Stop/[X] VCR	+	Shift + Stop		
	Stop/[X] [=]		Exit		
	Stop/[X] DVD		Stop		
	Standby/[≡i] VCR	+	Shift + Power		
	Standby/[≡i] [=]		Media		
	Standby/[≡i] DVD		Smart		
	i/Timer		Info		
	O))/		Dual		

