











 

 
 






 
 

 






 

 
 
 
 



 



 

 

 
 


Originale	Sostituto
 Power	 Power
 Ambilight	 Pre Ch
 Windows	 Shift + Media
 Tv/Exit	 Exit
 Rakuten Tv	 TV/R
 Menu	 Menu
 Netflix	 Media
 Pair/Sources	 AV
 Smart/Colors	 Smart
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 ←	 Back
 →	 Options
 Home	 Shift + Smart

Originale	Sostituto
 <<	 <<
 Play	 Play
 >>	 >>
 Stop	 Stop
 Pause	 Pause
 Rec	 Rec
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Tv Guide	 Guide
 CH+	 Ch +
 CH-	 Ch -
 1	 1





Originale		Sostituto	
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Text		Text
	List		List

Originale		Sostituto	

