


 










 

 
 
 







 
 

 








Originale	Sostituto
 Power	 Power
 Ambilight	 Pre Ch
 Windows	 Shift + Media
 Tv/Exit	 Exit
 Rakuten Tv	 TV/R
 Menu	 Menu
 Netflix	 Media
 Pair/Sources	 AV
 Smart/Colors	 Smart
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 ←	 Back
 →	 Options
 Home	 Shift + Smart

Originale	Sostituto
 <<	 <<
 Play	 Play
 >>	 >>
 Stop	 Stop
 Pause	 Pause
 Rec	 Rec
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Tv Guide	 Guide
 CH+	 Ch +
 CH-	 Ch -
 1	 1





Originale		Sostituto	
2	2	2	2
3	3	3	3
4	4	4	4
5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
0	0	0	0
TEXT	Text	REPEAT TEXT	Text
≡	List	DISC NAV LIST	List

Originale		Sostituto	

