




 
 








 










 


 




Originale	Sostituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Source	 AV
 TV/Radio	 TV/R
 Info	 Info
 Menu	 Menu
 Back	 Back
 Media	 Media

Originale	Sostituto
 EPG	 Guide
 Exit	 Exit
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Vol+	 Vol +
 Vol-	 Vol -
 Fav	 Pre Ch
 Opt	 Options
 CH+ / Page+	 Ch +
 CH- / Page-	 Ch -



