





 






 


 
 

 




 

 

 




 










 




 
 
 
 
 


 
 
 
 
 
 
 
 
 
 
 
 




Originale	Sostituto	Originale	Sostituto
	Power		Power
	AV Mode		Shift + AV
	Radio		TV/R
	TruSurround		List
	OPC		Media
	DTV		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Pre Ch
	Source		AV
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	[<>]		Format
	v/O)/I/II/I+II		Dual
	[i+]		Info
	Sleep		Sleep
	EPG		Guide
	ESG		Options
	DTV Menu		D. Menu
	[≡]		Text
	Menu		Menu
	End		Exit
	Return		Back





Originale	Sostituto
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 [≡?]	 3D
 [≡+]	 Eject
 [...]	 Subt
 [≡o]	 Shift + 3D
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue

Originale	Sostituto

