 







 



 









 


















 








 









Originale	Sostituto
 Open/Close	 Eject / Surround
 Video On/Off	 Smart / List
 Dimmer	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 Clear	 Exit / Cancel / Clear
 4	 4
 5	 5
 6	 6
 +10	 Guide / EPG / -/--
 7	 7
 8	 8
 9	 9
 0	 0
 Return	 Back / Return

Originale	Sostituto
 Program	 TV/Radio /
 Search	 Red / Netflix / Search
 Top Menu	 D.Menu / Top
 Setup	 Setup / OPT /
 Up	 Up
 Menu	 Menu / Home
 Left	 Left
 Enter	 OK
 Right	 Right
 Stop	 Stop / Hold
 Down	 Down
 Play	 Play / Slow
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Random	 Blue / Prime Video / Random
 Pause	 Pause / Step / Freeze
 <<	 << / Tune-





Originale	Sostituto
 >>	 >> / Tune+
 F.Memo	 Sleep / Timer
 Video ADJ.	 Picture / Format
 A-B	 Yellow / YouTube / Repeat
 Repeat	 Green / APP / Repeat
 Display	 Display / Media
 Angle	 Info / Angle
 Subtitle	 Subtitle / EQ
 Audio	 Audio / Lang I/II
 Last Memo	 Text / Goto
 Condition Memo	 AV / Input / RDS

Originale	Sostituto

