



Originale	Sostituto
Standby	Power
DTV/VCR	AV
Rec List	List
Slow	Media
Play	Play
Pause	Pause
Stop	Stop
>>	>>
<<	<<
Record	Rec
Menu	Menu
Exit	Exit
EPG	Guide
Favorite	Pre Ch
Up	Up
Down	Down
Right	Right

Originale	Sostituto
Left	Left
OK	Ok
CH+	Ch +
CH-	Ch -
Vol+	Vol +
Vol-	Vol -
Goto	Options
Recall	Back
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9





Originale	Sostituto
0	0
PVR Info	Format
Info	Info
Subtitle	Subt
Text	Text
Tv/Radio	TV/R
Lang	Dual
Audio	+ Shift + Dual
Mute	Mute
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue

Originale	Sostituto

