



Originale	Sostituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Source	 AV
 Normal	 Pre Ch
 [*]	 Info
 Menu	 Menu
 Mode	 Smart

Originale	Sostituto
 PR+	 Ch +
 PR-	 Ch -
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Vol+	 Vol +
 Vol-	 Vol -
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 [≡X]	 Options
 [≡+]	 Subt
 [≡]	 Text
 [≡?]	 TV/R





Originale		Sostituto		Originale		Sostituto	
	[≡o]		Dual				
	[≡◇]		Media				
	Timer		Shift + AV				
	Zoom		Eject				
	3D		3D				

