



Originale		Sostituto		Originale		Sostituto	
	On / Standby		Power		Muting		Mute / Dimmer
	Input Selector V1		1		Left		Left
	Input Selector V2		4		Enter		OK
	Input Selector V3		7		Right		Right
	Input Selector Multi CH		8		Return		Back / Return
	Input Selector		2		Down		Down
	Input Selector		5		Setup		Setup / OPT /
	Input Selector Tuner		6		Pause/<		Pause / Step / Freeze
	Input Selector CD		3		Play		Play / Slow
	Dimmer		Shift + Mute / Dimmer		Stop		Stop / Hold
	Sleep		Sleep / Timer		<<		<< / Tune-
	CH/Disc/Album		Shift + CH+ /		>>		>> / Tune+
	CH/Disc/Album-		Shift + CH- /		I<<		I<< / Preset-
	Vol+		Vol+		>>I		>>I / Preset+
	Vol-		Vol-		Stereo		Audio / Lang I/II
	SP A/B		Zoom / Size		Surround		Eject / Surround
	Up		Up		<		Shift + Left





Originale	Sostituto
	SHIFT +  Shift + Right
	Sound / Title
	Smart / List
	CH- / Page-
	CH+ / Page+
	Display / Media
	Subtitle / EQ
	Exit / Cancel / Clear
	TV/Radio /

Originale	Sostituto

