





Originale	Sostituto
 Standby	 Power
 Equalizzatore	 Shift + Sound / Title
 Surround	 Shift + Eject / Surround
 Eject	 Eject / Surround
 Audio	 Audio / Lang I/II
 1	 1
 2	 2
 3	 3
 Angle	 Info / Angle
 4	 4
 5	 5
 6	 6
 Sottotitoli	 Subtitle / EQ
 7	 7
 8	 8
 9	 9
 Ricerca	 Red / Netflix / Search

Originale	Sostituto
 Canc	 Exit / Cancel / Clear
 0/10	 0
 10+	 Guide / EPG / -/-
 Titolo	 Sound / Title
 Up	 Up
 Menu	 Menu / Home
 Left	 Left
 OK	 OK
 Right	 Right
 Programm	 TV/Radio /
 Down	 Down
 Display	 Display / Media
 PAL/NTSC	 D.Menu / Top
 Setup	 Setup / OPT /
 Digest	 Shift + D.Menu / Top Menu
 Vol+	 Vol+
 Mute	 Mute / Dimmer





	Originale	Sostituto
	Mark	 Fav / Marker / PC
	Zoom	 Zoom / Size
	Vol-	 Vol-
	A-B	 Yellow / YouTube / Repeat
	Ripeti	 Back / Return
	Slow	 Shift + Play /
	<</F.RWD	 << / Tune-
	F.FWD/>>	 >> / Tune+
	I<< / Skip-	 I<< / Preset-
	>>I / Skip+	 >>I / Preset+
	Stop	 Stop / Hold
	Pause/Step	 Pause / Step / Freeze
	Play	 Play / Slow

	Originale	Sostituto

