



| Originale | Sostituto |
|---|--|
|  Standby |  Power |
|  Equalizzatore |  Shift + Sound / Title |
|  Surround |  Shift + Eject / Surround |
|  Eject |  Eject / Surround |
|  Audio |  Audio / Lang I/II |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  Angle |  Info / Angle |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  Sottotitoli |  Subtitle / EQ |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  Ricerca |  Red / Netflix / Search |

| Originale | Sostituto |
|--|---|
|  Canc |  Exit / Cancel / Clear |
|  0/10 |  0 |
|  10+ |  Guide / EPG / -/- |
|  Titolo |  Sound / Title |
|  Up |  Up |
|  Menu |  Menu / Home |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Programm |  TV/Radio / |
|  Down |  Down |
|  Display |  Display / Media |
|  PAL/NTSC |  D.Menu / Top |
|  Setup |  Setup / OPT / |
|  Digest |  Shift + D.Menu / Top Menu |
|  Vol+ |  Vol+ |
|  Mute |  Mute / Dimmer |



