



| Originale | Sostituto |
|---------------|--------------------------|
| Standby | Power |
| Equalizzatore | Shift + Sound / Title |
| Surround | Shift + Eject / Surround |
| Eject | Eject / Surround |
| Audio | Audio / Lang I/II |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| Angle | Info / Angle |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| Sottotitoli | Subtitle / EQ |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| Ricerca | Red / Netflix / Search |

| Originale | Sostituto |
|-----------|---------------------------|
| Canc | Exit / Cancel / Clear |
| 0/10 | 0 |
| 10+ | Guide / EPG / -/- |
| Titolo | Sound / Title |
| Up | Up |
| Menu | Menu / Home |
| Left | Left |
| OK | OK |
| Right | Right |
| Programm | TV/Radio / |
| Down | Down |
| Display | Display / Media |
| PAL/NTSC | D.Menu / Top |
| Setup | Setup / OPT / |
| Digest | Shift + D.Menu / Top Menu |
| Vol+ | Vol+ |
| Mute | Mute / Dimmer |





| Originale | | Sostituto | | Originale | | Sostituto | |
|---|-------------|---|---------------------------|-----------|--|-----------|--|
|  | Mark |  | Fav / Marker / PC | | | | |
|  | Zoom |  | Zoom / Size | | | | |
|  | Vol- |  | Vol- | | | | |
|  | A-B |  | Yellow / YouTube / Repeat | | | | |
|  | Ripeti |  | Back / Return | | | | |
|  | Slow |  | Shift + Play / | | | | |
|  | <</F.RWD |  | << / Tune- | | | | |
|  | F.FWD/>> |  | >> / Tune+ | | | | |
|  | I<< / Skip- |  | I<< / Preset- | | | | |
|  | >>I / Skip+ |  | >>I / Preset+ | | | | |
|  | Stop |  | Stop / Hold | | | | |
|  | Pause/Step |  | Pause / Step / Freeze | | | | |
|  | Play |  | Play / Slow | | | | |

