



Originale	Sostituto
Power On	Power
Standby	Shift + Power
Source	AV / Input / RDS
1/Comp1	1
2/Comp2	2
3/Auto Adj.	3
4/HDMI1	4
5/HDMI2	5
6/Display Port	6
7/Video	7
8/USB-A	8
9/USB-B	9
ID Set/+	Guide / EPG / -/--
0/LAN	0
Clear	Shift + Exit / Cancel / Clear
Clear	Fav / Marker / PC
AV-Mute	Mute / Dimmer

Originale	Sostituto
Freeze	Pause / Step / Freeze
Menu	Menu / Home
Exit	Exit / Cancel / Clear
Up	Up
Left	Left
Enter	OK
Right	Right
D-Zoom+	>> / Tune+
Down	Down
Page+	CH+ / Page+
D-Zoom-	<< / Tune-
Page-	CH- / Page-
Mouse L-Click	Smart / List
Mouse R-Click	Display / Media
Eco	D.Menu / Top
Keystone	Setup / OPT /
Picture	Picture / Format





	Originale	Sostituto	Originale	Sostituto
	Vol+	Vol+		
	Help	Info / Angle		
	Focus/Zoom	Zoom / Size		
	Aspect	Shift + Picture / Format		
	Vol-	Vol-		

