



Originale	Sostituto
 Power	 Power
 Display	 Display / Media
 Guide	 Guide / EPG / -/--
 Source	 AV / Input / RDS
 Wide	 Picture / Format
 MPX	 Setup / OPT /
 Menu	 Menu / Home
 Up	 Up
 Back / Cancel	 Back / Return
 Back / Cancel	 Exit / Cancel / Clear
 Left / <<	 Left
 Left / <<	 << / Tune-
 OK	 OK
 Right / >>	 Right
 Right / >>	 >> / Tune+
 Mute	 Mute / Dimmer
 Down	 Down

Originale	Sostituto
 FAV	 Fav / Marker / PC
 Vol+	 Vol+
 CH+	 CH+ / Page+
 Vol-	 Vol-
 CH-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Teletext	 Text / Goto
 0	 0
 Subtitle	 Subtitle / EQ





Originale		Sostituto		Originale	Sostituto
	Red		Red / Netflix / Search		
	Green		Green / APP / Repeat		
	Yellow		Yellow / YouTube / Repeat		
	Blue		Blue / Prime Video / Random		
	Index / I<<		I<< / Preset-		
	Index / I<<		Info / Angle		
	Size / Rec/Stop		Rec / Rec Mode		
	Size / Rec/Stop		Stop / Hold		
	Size / Rec/Stop		Zoom / Size		
	Hold / Play/Pause		Shift + Stop /		
	Hold / Play/Pause		Play / Slow		
	Hold / Play/Pause		Pause / Step / Freeze		
	Reveal / >>I		>>I / Preset+		
	Reveal / >>I		Smart / List		

