



 

 

 

 

 

 

 

 

 
 
 

 



 

 

 


 





 




 

 




 



 
 




 
 






Originale	Sostituto
 Power	 Power
 Open/Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Clear	 Exit
 <<	 <<
 >>	 >>
 I<<	 I<<
 >>I	 >>I

Originale	Sostituto
 Play	 Play
 Pause/Step	 Pause
 Stop	 Stop
 DVD Menu	 D. Menu
 Return	 Back
 Display	 Info
 O)/Audio	 Dual
 [...] /Subtitle	 Subt
 Setup	 Options
 Marker	 Media
 Search	 TV/R
 Camera/Angle	 Smart
 Program	 Sleep
 Zoom	 Shift + Eject
 Repeat	 Text
 A-B	 Format
 Random	 3D





Originale	Sostituto
*	Blue
PR/CH+ TV	Ch +
PR/CH- TV	Ch -
Vol+ TV	Vol +
Vol- TV	Vol -
Power TV	Shift + Power
AV TV	AV
Title	Red
Enter	Ok
Up	Up
Down	Down
Right	Right
Left	Left

Originale	Sostituto

