

 





 









 



 







 













 

 













 































 







Originale	Sostituto
 Standby	 Power
 Mute	 Mute / Dimmer
 Play / Size	 Play / Slow
 Pause /	 Pause / Step / Freeze
 Stop / Hold	 Stop / Hold
 <<<	 <<< / Tune-
 >>>	 >>> / Tune+
 <<<	 <<< / Preset-
 >>>	 >>> / Preset+
 S.Mode	 Sound / Title
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Pic. Mode	 Picture / Format
 Sleep	 Sleep / Timer
 TV / Radio	 TV/Radio /
 Index	 D.Menu / Top
 Text	 Text / Goto

Originale	Sostituto
 Source	 AV / Input / RDS
 Menu	 Menu / Home
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Recall	 Back / Return
 Vol+	 Vol+
 CH. List	 Smart / List
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Display	 Display / Media
 CH-	 CH- / Page-
 1	 1
 2	 2





Originale	Sostituto
	
	
	
	
	
	
	
	
	 Fav / Marker / PC
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Shift + Picture / Format
	 Shift + Menu /
	 Shift + Back / Return
	 Shift + Smart / List

Originale	Sostituto
	 Shift + Display / Media

