










 


















Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 EPG	 Guide / EPG / -/--
 0	 0
 TXT	 Text / Goto
 Vol+	 Vol+
 Source	 AV / Input / RDS
 P+	 CH+ / Page+

Originale	Sostituto
 Vol-	 Vol-
 Home	 Menu / Home
 P-	 CH- / Page-
 *	 Smart / List
 Up	 Up
 i	 Info / Angle
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Netflix	 Shift + Red / Netflix /
 YouTube	 Shift + Yellow / YouTube /
 prime video	 Shift + Blue / Prime
 USB	 Shift + 8
 Red	 Red / Netflix / Search





	Originale	Sostituto	Originale	Sostituto
	 Green	 Green / APP / Repeat		
	 Yellow	 Yellow / YouTube / Repeat		
	 Blue	 Blue / Prime Video / Random		
	 <<	 << / Tune-		
	 Play	 Play / Slow		
	 Pause	 Pause / Step / Freeze		
	 >>	 >> / Tune+		
	 Rec	 Rec / Rec Mode		
	 Stop	 Stop / Hold		
	 Audio	 Audio / Lang I/II		

