


 
 


 

 

 

 

 

 

 

 

 

 

 
 
 
 
 






Originale	Sostituto
 Power	 Power
 i	 DISPLAY INFO
 Input Select	 TIMER AV
 Picture Size	 PICTURE FORMAT
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 [≡o] [≡x]/P↔P	 ECO 3D
 Audio I/II	 SOUND DUAL
 [≡?]	 HOME SMART

Originale	Sostituto
 [≡◇]	 ZOOM Eject
 Sleep	 PROG SLEEP Sleep
 Mute	 MUTE Mute
 Menu	 TOP MENU MENU Menu
 [≡]	 REPEAT TEXT Text
 Up / P+	 Up
 Up / P+	 + CH Ch +
 Down / P-	 Down
 Down / P-	 CH - Ch -
 Right / Vol+	 Right
 Right / Vol+	 + VOL Vol +
 Left / Vol-	 Left
 Left / Vol-	 VOL - Vol -
 Enter / CH List	 OK Ok
 Enter / CH List	 DISC NAV LIST List
 Exit	 CLEAR EXIT Exit
 Freeze / [≡+]	 Stop





Originale		Sostituto		Originale		Sostituto	
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				

