




 




 





 





 


 
 



 

 

 
 







Originale	Sostituto
 Power	 Power
 VCR	 Smart
 DVD	 Media
 DVD Open / Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Return	 Back
 Volume-	 Vol -
 Volume+	 Vol +

Originale	Sostituto
 Sound	 Dual
 Setup / Menu	 Menu
 Up / CH+	 Up
 Up / CH+	 Ch +
 Down / CH-	 Down
 Down / CH-	 Ch -
 Right / Tracking+	 Right
 Left / Tracking-	 Left
 Enter	 Ok
 Bass Boost	 Shift + Ch +
 Surround	 List
 Pause	 Pause
 Play	 Play
 Stop	 Stop
 << / Preset-	 <<
 >> / Preset+	 >>
 I<< / Tune-	 I<<



[illegible]