











 


 









Originale	Sostituto
	 Power
	 TV/Radio /
	 Shift + 2
	 CH+ / Page+
	 1
	 2
	 3
	 CH- / Page-
	 4
	 5
	 6
	 Vol+
	 7
	 8
	 9
	 Vol-
	 0

Originale	Sostituto
	 AV / Input / RDS
	 Info / Angle
	 Setup / OPT /
	 Menu / Home
	 Mute / Dimmer
	 Up
	 Left
	 OK
	 Text / Goto
	 Right
	 D.Menu / Top
	 Down
	 Exit / Cancel / Clear
	 << / Tune-
	 Play / Slow
	 >> / Tune+
	 I<< / Preset-



