



Originale	Sostituto
Standby	Power
Open / Close	Eject
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Search	+  Shift + TV/R
Clear	Exit
Program+	Ch +
Program-	Ch -
Return	Back

Originale	Sostituto
HDD/DVD	Media
Up	Up
Left	Left
Select	Ok
Right	Right
Down	Down
Setup	Options
TV/DVD	Smart
Video Source	AV
Function	D. Menu
Playlist+	Vol +
Playlist-	Vol -
Watch TV	TV/R
Play/Pause	Play
Play/Pause	Pause
Stop	Stop
Record/DUB	Rec





Originale	Sostituto
I<< Skip	I<<
Skip >>I	>>I
<< Search	<<
Search >>	>>
Edit	Red
Insert CHP.	Green
Rec Mode	+  Shift + Rec
Timer	+  Shift + AV
Play Mode	+  Shift + Play
Repeat	Text
Zoom	+  Shift + Eject
A-B	+  Shift + Text
Subtitle	Subt
Audio	Dual
Angle	Format
Title	List
Menu	Menu

Originale	Sostituto
Display	Info

