



| Originale | Sostituto | | |
|-----------|------------------|--|----------------------|
| | Standby | | Power |
| | Computer | | Comp / Video |
| | HDMI | | Mode |
| | 3D | | 3D / Invert |
| | S-Video | | Shift + Mode |
| | Video | | Shift + Comp / Video |
| | Freeze | | Freeze / Timer |
| | Image | | Help / Info |
| | Up / Keystone+ | | Up |
| | Down / Keystone- | | Down |
| | Left | | Left |
| | Input | | Source |
| | Menu | | Menu |
| | Menu | | Enter |
| | Mute | | Blank / Mute |
| | AV Mute | | Shift + Blank / Mute |
| | Right | | Right |

| Originale | Sostituto | | |
|-----------|-----------|--|----------------|
| | Auto ADJ | | Auto |
| | Aspect | | Eco / Aspect |
| | Vol- | | Vol - / Page - |
| | Vol+ | | Vol + / Page + |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

