

 



 

 

 

 

 

 

 

 

 

 

 

 
 
 
 






Originale	Sostituto
 Power	 Power
 Source	 AV
 HDMI	 Smart
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 --	 Guide
 PRE-CH	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -

Originale	Sostituto
 Mute	 Mute
 CH+	 Ch +
 CH-	 Ch -
 CH List	 List
 Media.P	 Media
 Menu	 Menu
 FAV.CH	 Shift + Pre Ch
 Tools	 Options
 Info	 Info
 Exit	 Exit
 Return	 Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Red	 Red





	Originale	Sostituto	Originale	Sostituto
	Green			
	Yellow			
	Blue			
	S.Mode			
	Sleep			
	MTS			
	P.Mode			
	P.Size			
	CC			
	<<			
	Pause			
	>>			
	Rec			
	Play			
	Stop			

