





 













 

 









 



 



 

















 



 









Originale		Sostituto		Originale		Sostituto	
	Power		Power		Right		Right
	Mute		Mute / Dimmer		Exit		Exit / Cancel / Clear
	Play		Play / Slow		Down		Down
	Pause		Pause / Step / Freeze		←		Back / Return
	Stop		Stop / Hold		V+		Vol+
	Rec		Rec / Rec Mode		Smart		Smart / List
	<<		<< / Tune-		P+		CH+ / Page+
	>>		>> / Tune+		V-		Vol-
	Lang		Audio / Lang I/II		P-		CH- / Page-
	[≡]..		Subtitle / EQ		1		1
	Text		Text / Goto		2		2
	Source		AV / Input / RDS		3		3
	Menu		Menu / Home		4		4
	Up		Up		5		5
	i		Info / Angle		6		6
	Left		Left		7		7
	OK		OK		8		8





Originale		Sostituto	
	9		9
	Guide		Guide / EPG / -/--
	0		0
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Home		Shift + Menu /
	Netflix		Shift + Red / Netflix /
	YouTube		Shift + Yellow / YouTube /

Originale		Sostituto	

