
















 
 



 


 


Originale	Sostituto
 Power	 Power
 Smart	 Smart / List
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Info	 Info / Angle
 0	 0
 Guide	 Guide / EPG / -/-
 Netflix	 Shift + Red / Netflix /
 YouTube	 Shift + Yellow / YouTube /
 Google Play	 Display / Media

Originale	Sostituto
 prime video	 Shift + Blue / Prime
 Home	 Shift + Menu /
 Up	 Up
 Menu	 Menu / Home
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Source	 AV / Input / RDS
 CH-	 CH- / Page-
 Red	 Red / Netflix / Search





Originale	Sostituto	Originale	Sostituto
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 <<	 << / Tune-		
 Play	 Play / Slow		
 >>	 >> / Tune+		
 Rec	 Rec / Rec Mode		
 Pause	 Pause / Step / Freeze		
 Stop	 Stop / Hold		
 Text	 Text / Goto		
 Subt	 Subtitle / EQ		
 Audio	 Audio / Lang I/II		

Originale	Sostituto	Originale	Sostituto

