

 

 





 
 


 



 
 
 

 





 





 

 



 

 

 
 


 


 
 
 
 

 

 

 

 








| Originale | Sostituto |
|--|---|
|  Power |  Power |
|  Mute |  Mute |
|  Open/Close |  Eject |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  Clear |  Shift + Clear |
|  Repeat/Tv/Radi |  TV/R |
|  I<< |  I<< |
|  << |  << |

| Originale | Sostituto |
|---|---|
|  >> |  >> |
|  >>I |  >>I |
|  Stop |  Stop |
|  Play |  Play |
|  Pause |  Pause |
|  Guide |  Guide |
|  Rec |  Rec |
|  PR List |  List |
|  Timer Rec |  AV |
|  PR+ |  Ch + |
|  PR- |  Ch - |
|  Home |  Smart |
|  Music ID |  Dual |
|  Info/Display |  Info |
|  Return |  Back |
|  Title/PopUp |  Media |
|  Disc Menu/Rec. List |  Menu |



