

 

 



 







 



 
 

 
 


 
 



 

 

 



 
 
 

 
 
 

 



 

 

 







 






Originale	Sostituto
 Power	 Power
 Mute	 Mute
 Open/Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Clear	 Shift + Clear
 Repeat/Tv/Radi	 TV/R
 I<<	 I<<
 <<	 <<

Originale	Sostituto
 >>	 >>
 >>I	 >>I
 Stop	 Stop
 Play	 Play
 Pause	 Pause
 Guide	 Guide
 Rec	 Rec
 PR List	 List
 Timer Rec	 AV
 PR+	 Ch +
 PR-	 Ch -
 Home	 Smart
 Music ID	 Dual
 Info/Display	 Info
 Return	 Back
 Title/PopUp	 Media
 Disc Menu/Rec. List	 Menu





Originale	Sostituto
Up	Up
Down	Down
Right	Right
Left	Left
Enter	Ok
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue
Marker	Format
Search	Shift + TV/R
Zoom	Shift + Eject
Text	Text
Subtitle	Subt
Exit	Exit
Power Tv	Shift + Power
AV/Input Tv	Shift + AV

Originale	Sostituto
Vol+ Tv	Vol +
Vol- Tv	Vol -
PR+ Tv	Shift + Ch +
PR- Tv	Shift + Ch -

