



 
 


 










 


 

 
 
 


 


 
 

 




Originale		Sostituto		Originale		Sostituto	
	Power		Power		Pause		Pause
	CH/Page+		Ch +		Stop		Stop
	CH/Page-		Ch -		Home		Smart
	Sleep		Sleep		>> /Tune+		>>
	Mute		Mute		<</Tune-		<<
	Volume+		Vol +		>>		>>
	Volume-		Vol -		<<		<<
	Info		Info		Green/Movie		Green
	Option		Options		Red/Music		Red
	Setup		Menu		Blue/Game		Blue
	Back		Back		Yellow/Pure		Yellow
	Up		Up		1		1
	Enter		Ok		2		2
	Down		Down		3		3
	Right		Right		4		4
	Left		Left		5		5
	Play		Play		6		6







 

 
 
 

 


 


 

 
 
 

 

 
 


 








 





Originale	Sostituto
7	7
8	8
9	9
0	0
Smart Select 1	Text
Smart Select 2	AV
Smart Select 3	Format
Smart Select 4	3D
TV Audio	TV/R
CBL/SAT	Shift + 1
DVD	Shift + 2
Blu-ray	Shift + 3
AUX1	Shift + 4
Tuner	Shift + 5
Bluetooth	Shift + 6
Game	Shift + 7
Phono	Shift + 9

Originale	Sostituto
AUX2	Shift + 8
USB	Guide
Media Player	Shift + Guide
Internet Radio	Pre Ch
CD	Shift + 0
Heos (Online)	Shift + Pre Ch





	Originale	Sostituto	Originale	Sostituto
	Power			>>
	CH/Page+			<<
	CH/Page-			>> /Tune+
	Sleep			<</Tune-
	Mute			1
	Volume+			2
	Volume-			3
	Back			4
	Up			5
	Down			6
	Right			7
	Left			8
	Enter			9
	Home			0
	Stop			Smart Select 1
	Pause			Smart Select 2
	Play			Smart Select 3
				Text
				AV
				Format





 



 



 

 
 


 
 



 



 
 

 


 
 
 







 
 

 
 

 
 
 


 



 


 




Originale	Sostituto
Smart Select 4	3D
TV Audio	TV/R
Media Player	Shift + Guide
Internet Radio	Pre Ch
CBL/SAT	Shift + 1
DVD	Shift + 2
Blu-ray	Shift + 3
AUX1	Shift + 4
Tuner	Shift + 5
Bluetooth	Shift + 6
Game	Shift + 7
AUX2	Shift + 8
Phono	Shift + 9
USB	Guide
CD	Shift + 0
Online Music	Shift + Pre Ch

Originale	Sostituto

 
 

 


 
















 





Originale		Sostituto		Originale		Sostituto	
	Power		Power		>> /Tune+		>>
	CH/Page+		Ch +		<</Tune-		<<
	CH/Page-		Ch -		<<		<<
	Sleep		Sleep		>>		>>
	Mute		Mute		1		1
	Volume+		Vol +		2		2
	Volume-		Vol -		3		3
	Back		Back		4		4
	Up		Up		5		5
	Down		Down		6		6
	Right		Right		7		7
	Left		Left		8		8
	Enter		Ok		9		9
	Home		Smart		0		0
	Stop		Stop		Smart Select 1		Text
	Pause		Pause		Smart Select 2		AV
	Play		Play		Smart Select 3		Format





	Originale	Sostituto
	Smart Select 4	 3D 3D
	TV Audio	 TV/R TV/R
	Media Player	 Shift + Guide
	Internet Radio	 Pre Ch
	CBL/SAT	 Shift + 1
	DVD	 Shift + 2
	Blu-ray	 Shift + 3
	AUX1	 Shift + 4
	Tuner	 Shift + 5
	Bluetooth	 Shift + 6
	Game	 Shift + 7
	AUX2	 Shift + 8
	Phono	 Shift + 9
	USB	 Guide
	CD	 Shift + 0
	Online Music	 Shift + Pre Ch

	Originale	Sostituto

