
 

 

 

 



 

 

 



 




 






 

 



 




Originale	Sostituto
 Power	 Power
 Mute	 Mute
 UHF	 Smart
 Pause	 Pause
 EPG	 Guide
 A-Z	 Media
 FAV	 Pre Ch
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Originale	Sostituto
 TV/Radio	 TV/R
 Menu	 Menu
 Back	 Back
 Exit	 Exit
 Info	 Info
 Up / CH+	 Up
 Up / CH+	 Ch +
 Down / CH-	 Down
 Down / CH-	 Ch -
 Right / Vol+	 Right
 Right / Vol+	 Vol +
 Left / Vol-	 Left
 Left / Vol-	 Vol -
 OK	 Ok
 Red / FTA/CAS	 Red
 Green / SAT	 Green
 Yellow / TV/SAT	 Yellow



